

# SIRIUS<sup>α</sup>

## Basic Manual



.....  
Introduction  
.....

.....  
Table of Contents  
.....

.....  
Before Using Your  
New Cell Phone  
.....

.....  
Basic Functions  
.....

.....  
Phone Functions  
.....

.....  
Mail Functions  
.....

.....  
Google Functions  
.....

.....  
Internet Functions  
.....

.....  
Multimedia Functions  
.....

.....  
Useful Functions  
.....

.....  
In Case of  
Loss of Your IS06  
.....

.....  
Appendix/Index  
.....

---

## Introduction

---

Thank you for purchasing the IS06. Before using your IS06, be sure to read the IS06 Basic Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

### Manuals for the IS06

The IS06 comes with the Basic Manual and Instruction Manual.

#### ● For learning the basics:

Read the IS06 Basic Manual (this manual).

#### ● For learning details on using each function:

Read the supplied IS06 Instruction Manual (Japanese). Be sure to read the Safety Precautions “安全上のご注意” to ensure proper usage of the IS06.

The keyword searchable au Online Manual is also available on the au homepage:

**<http://www.au.kddi.com/manual/index.html>**

---

## Notes on Cell Phone Use

---

### Cell Phone Etiquette

The cell phone always emits weak radio waves when power is on.

Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you.

#### ● Use of cell phones is not allowed in some places.

- Do not use the cell phone while you are driving. Doing so is both dangerous and prohibited by law.
- Using a cell phone in an aircraft is prohibited by law. Be sure to turn the cell phone off.

#### ● Radio waves from cell phones may interfere with medical electrical equipment.

- Some people close to you in crowded places such as packed trains may be using a cardiac pacemaker. Turn the cell phone off in such places.
  - Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.
- #### ● Be considerate of where you use the cell phone and how loudly you talk.
- Do not make calls in theaters, museums, libraries, and other similar places. Turn power off or turn on

manner mode not to disturb others around you by ringtones.

- Do not use the cell phone on a street where you might interrupt the flow of pedestrians.
- Move to areas where you will not inconvenience others on trains or in hotel lobbies.
- Refrain from talking in a loud voice.
- Obtain the permission of other people before you take their photos with the cell phone's camera.
- Do not record information with the cell phone's camera in bookstores and other locations where taking photos is not permitted.

### Do not use the cell phone while driving!

Turn off your cell phone or put it in Drive mode while driving.

Do not use the cell phone while driving a car/ motorcycle or riding a bicycle. It may result in a traffic accident. Using a cell phone while driving is prohibited by law. Using a cell phone while riding a bicycle may also be punishable by law.

#### Prohibited!



- Looking at a cell phone display
- Talking on a cell phone while holding it

## Illustrations and Screenshots in This Manual

The illustrations in this manual may look different from the actual cell phone in shape, color and typeface. The screenshots in this manual are simplified and may look different from the actual cell phone screens.

## Notation of Tapping Instructions in This Manual

This instruction manual omits the phrase “tap” when listing instructions that involve tapping menu items, icons, keys, or other user interface elements. Ex.: Registering a new contact in your Contacts from the Dialer

 **[Phone]** ► **Enter phone number** ►   
 ► **[Create new contact]**

→ This means, Tap  **[Phone]** ► **Enter phone number** ► Tap  ► Tap **[Create new contact]**.

# Table of Contents

Introduction .....	ii
Notes on Cell Phone Use .....	ii
Illustrations and Screenshots in This Manual .....	1
Notation of Tapping Instructions in This Manual .....	1
Table of Contents .....	2

## Before Using Your New Cell Phone

List of Icons .....	5
List of Included Items .....	6
Names and Functions of Parts .....	7
Included Items .....	9
Battery Pack .....	9
au IC-Card .....	11
microSD Memory Card ..	12
Turning On/Off the Power .....	13
Turning On the Power .....	13
Turning Off the Power .....	13
Switching the Display Language .....	13

Using the System Settings .....	13
Using the Initial Settings Screen .....	13
Setting Manner Mode/ Airplane Mode .....	14
Setting Manner Mode .....	14
Setting Airplane Mode .....	14
Touch Panel .....	14

Operating the Touch Panel .....	14
Displaying the Home Preview Screen .....	17
Executing Widgets .....	18
Locking the Screen .....	20
Unlocking the Screen .....	20
How to Input Character ...	21
Showing the Keyboard .....	21
Using the Android Keyboard .....	21
Using the iWnn IME Keyboard .....	22

## Basic Functions

Using Android .....	25
Home Screen .....	26

Using the Home Screen .....	26
Viewing the Status Bar .....	27
Showing the Notification Panel/Using Easy Setting .....	27
Using Applications/ Widgets/Folders .....	28
Menu Screen .....	31
Using Applications and Other Functions .....	31
Quick Search .....	32
Using Quick Search .....	32

## Phone Functions

Making a Phone Call .....	34
Entering a Phone Number to Call .....	34
Making International Calls .....	34
Searching and Calling From Your Contacts .....	35
Making a Call Using the Call Log .....	35
Receiving a Call .....	36
In Call Functions .....	37
Adjusting the Receiver Volume .....	37
Call Log .....	37
Viewing Your Call Log .....	37

Making a Call From Your Call Log .....	37
Sending E-mail/C-mail From Your Call Log .....	37
Contacts .....	38
Adding a New Contact .....	38
Viewing Your Contacts .....	39
Quick Contact .....	39
Deleting a Contact .....	39
Editing a Contact .....	39

## Mail Functions

E-mail .....	41
Configuring E-mail Initial Settings .....	41
E-mail Contacts .....	41
Sending E-mail .....	45
Viewing Received E-mails .....	46
Check the E-mails in Each Folder .....	46
Setting Mail Filters .....	47
C-mail .....	50
Sending C-mail .....	50
Viewing Received C-mails .....	51
Using the Earthquake Early Warning .....	52



Viewing Received Earthquake Early Warning .....	53
Setting Up the Earthquake Early Warning .....	54
C-mail Safety Block .....	55
Setting Up a C-mail Receiving Filter .....	56
<b>PC-mail</b> .....	<b>57</b>
Setting Up PC-mail .....	57
Managing Received PC-mail .....	58
Sending PC-mail .....	59

## Google Functions

Using Google Services ...	61
Registering an Existing Google Account .....	61
Creating a New Google Account .....	62
<b>Gmail</b> .....	<b>63</b>
Viewing Your Inbox .....	63
Sending Mails .....	64
Showing Labels .....	64
<b>Android Market</b> .....	<b>65</b>
Using the Android Market .....	65
<b>Google Voice Search</b> .....	<b>67</b>

Using Voice Search .....	67
<b>Using Other Google Services</b> .....	<b>68</b>
Using Google Talk .....	68
Using Google Maps .....	68
Using Google Maps Navigation .....	68
Using Google Places .....	69
Using Google Latitude .....	69
Using Google News and Weather .....	69
Using Google Calendar .....	69

## Internet Functions

Connecting to the Internet .....	71
Using Wi-Fi .....	71
Using Data Communication Services .....	72
<b>Browser</b> .....	<b>73</b>
Displaying a Web Page ...	73
Possible Actions While Displaying a Web Page ...	73
<b>au one Market</b> .....	<b>75</b>
Downloading Applications .....	75
Deleting Downloaded Applications .....	76

## Multimedia Functions

<b>Camera</b> .....	<b>78</b>
Before Taking a Photo .....	78
Taking a Photo .....	78
After Taking a Photo .....	79
Before Recording a Movie .....	80
Record a Movie .....	80
After Recording a Movie .....	81
<b>Gallery</b> .....	<b>82</b>
Viewing Photos .....	82
Viewing Movies .....	82

## Useful Functions

<b>Alarm/Wakeup Call</b> .....	<b>84</b>
Setting an Alarm .....	84
Setting a Wakeup Call .....	84
<b>PocketBook</b> .....	<b>85</b>
Voice Recorder .....	85
Playing Back Your Recordings .....	85
Using the Calculator .....	86
Setting Up the World Clock .....	86
Using the Stopwatch .....	87
<b>SmartNote</b> .....	<b>88</b>
Creating a New Note .....	88

Editing an Existing Note ...	89
Deleting a Note .....	89

## In Case of Loss of Your IS06

<b>Remote Control Lock</b> .....	<b>91</b>
Activating the Device Administrator .....	91
Setting Up the Remote Control Lock .....	91
Activating the Remote Control Lock From a Registered Phone .....	92
Unlocking the Remote Control Lock .....	92
<b>Security Lock Service</b> .....	<b>93</b>
Activating the Remote Control Lock Using the Security Lock Service .....	93

## Appendix/Index

<b>Troubleshooting</b> .....	<b>95</b>
<b>Index</b> .....	<b>97</b>

# Before Using Your New Cell Phone

List of Icons

List of Included Items

Names and Functions of Parts

Included Items

Turning On/Off the Power

Switching the Display Language


Setting Manner Mode/Airplane Mode

Touch Panel

How to Input Character

# List of Icons

You can check the current settings and status of your iOS6 by looking at the icons on the status bar at the top of the display.

 : Calling or currently in a call

 : Missed call



 : Putting a call on hold

 : In a call using a Bluetooth® headset

 : Information available

 : An error occurred/Warning display

Character input mode display

						
Hiragana-Kanji	Full-width Katakana	Half-width Katakana	Full-width Alphabet	Half-width Alphabet	Full-width Numeric	Half-width Numeric

 : New E-mail

 : New C-mail

 : New Earthquake Early Warning

 : New PC-mail

 : Syncing data

 : Data sync failed

 : Alarm/Wakeup call set

 : Call volume muted

 : Silent manner mode

 : Manner mode

 : Bluetooth® standby

 : Bluetooth® connecting

 : Connected to Wi-Fi (display signal strength)

 : Open network available

 : Using GPS

 : Insufficient disk space

 : Preparing microSD memory card

 : Connected by USB

 : USB debugging

 : Packet transmission available

 : During packet transmission

 : Receiving packets

 : Sending packets

 : Battery power level

 : Battery power level (when charging)

 : Signal strength

 : Out of area

 
 : Airplane mode

 : Playing music

 : Displays the current time

 : Software update available


## List of Included Items




● IS06



 ● Battery pack



● microSD memory card (2 GB) (Sample)

 

● PANTECH microUSB-18 pin (charger) conversion cable



● USB-microUSB conversion cable (Sample)



● PANTECH earphone jack conversion adapter 03




● Instruction Manual (Japanese)




● Setting Guide (Japanese)

- Warranty (Japanese)
- Safety Precautions (Japanese)
- Software Update Guide (Japanese)
- au International Call Guide (Japanese)

## Before Using Your New Cell Phone

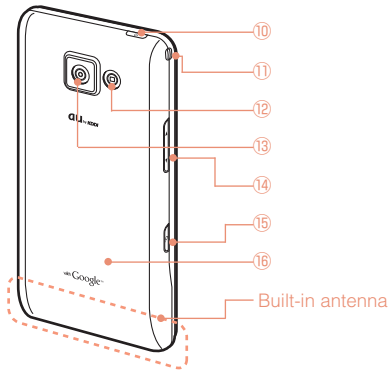 

 Be careful not to place any stickers over the built-in antenna or cover the built-in antenna with your hand when transmitting data or talking. Call and network connection quality will be adversely affected.

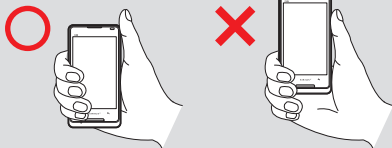

① **Proximity sensor**

② **Receiver**

Allows you to hear ringtones, incoming call voice, and multimedia playback audio, etc.

③ **microUSB connection jack**

④ **Display (touch panel)**

⑤ **Back key**

Return to the previous screen.

⑥ **Home key**

Displays the Home screen.  
Hold down to display a list of recently used applications and functions.

⑦ **Menu key**

Displays a menu for the application or function currently used.

⑧ **Microphone**

Transmits your voice during a call.  
Also used to record sounds.

⑨ **LED lamp**

Lights up red while charging.  
Flashes when receiving a call or when an alarm rings depending on your settings.

⑩ **Power key**

Turns on the IS06 by holding down this key while the power is turned off.

Used to turn the power on and off, turn the screen on or off, or end a call. Hold down to display a menu of phone options (manner/airplane mode).

⑪ **Strap eyelet**

⑫ **Camera light**

⑬ **Camera (lens)**







⑭ **Volume key**

⑮ **Search key**

Press for application-specific search features or to search your IS06 information or the web via Quick Search.

⑯ **Battery pack cover**


This manual represents each key as shown below.

Menu key	▶	 (Menu)
Home key	▶	 (Home)
Back key	▶	 (Back)
Search key	▶	 (Search)
Power key	▶	 (Power)
Volume key	▶	 (Volume)

# Included Items

 
## Battery Pack

### Removing the Battery Pack

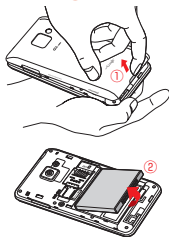

- ① Insert the tip of your finger (fingernail) into the slot at the bottom of the battery pack cover and lift up.
- ② Use the groove to lift the battery pack out.

### Inserting the Battery Pack

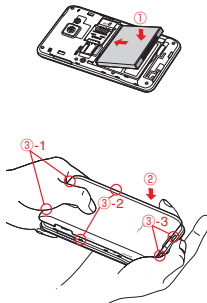 


- ① Confirm the location of the connectors in the IS06 and insert the battery pack in the proper orientation.
- ② Place the battery pack cover back on the IS06.
- ③ Push down on the two locations at ③-1, the two locations at ③-2, and the two locations at ③-3, in that order.

### Battery Life

 Standby time	Approximately 200 hours
Talk time	Approximately 300 minutes

- Battery life may be shorter than the list depending on the applications and functions used.

## Charging the Battery Pack

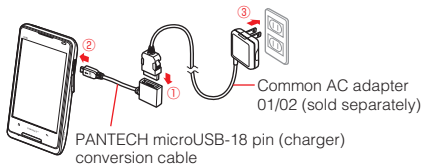

- To remove the PANTECH microUSB-18 pin (charger) conversion cable from the common AC adapter 01/02 (sold separately), pull the cable out in a straight line while holding down the release buttons on both sides of the connector.
- If you charge the IS06 when the battery pack has no power left, it may take a few moments for the charging notice to display on the screen.


Charging time takes approximately 190 minutes.

- ① Connect the PANTECH microUSB-18 pin (charger) conversion cable to the common AC adapter 01/02 (sold separately).
- ② Open the microUSB connection jack cover on the IS06 and connect the PANTECH microUSB-18 pin (charger) conversion cable.
- ③ Plug the common AC adapter 01/02 (sold separately) into an 100 V AC power outlet.  
The LED lamp lights up red, and - will be displayed.  
The LED lamp will go out when charging is complete.
- ④ Unplug the PANTECH microUSB-18 pin (charger) conversion cable from the IS06 in a straight line once charging is complete.
- ⑤ Close the microUSB connection jack cover.
- ⑥ Unplug the common AC adapter 01/02 (sold separately) from the power outlet.




## au IC-Card

 The au IC-Card contains your phone number and other personal details.



## Inserting/Removing the au IC-Card

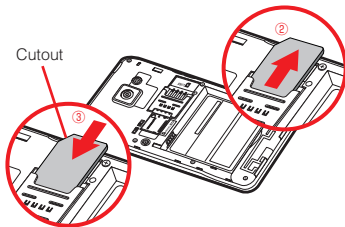 

- ① Turn off the IS06 and remove the battery pack cover.
- ② Slightly raise the au IC-Card and pull it out in the direction of the arrow.
- ③ To insert the au IC-Card, insert it in the direction of the arrow. Make sure the IC (metal) portion is facing down and the cutout on the au IC-Card matches that shown in the figure.

### NOTE

 
- Pay attention to the followings not to damage the au IC-Card.
  - Do not touch the IC (metal) portion of the au IC-Card or the IC card terminal on the IS06.
  - Check to ensure that the au IC-Card is inserted in the correct direction.
  - Do not apply excessive force when inserting or removing the au IC-Card.
- Be careful not to lose your au IC-Card after removing it.

## microSD Memory Card

### Notes on Handling of microSD Memory Card

- Do not remove the microSD memory card, the battery pack, or turn off the power when loading, writing, saving, playing, moving, or copying data to and from the microSD memory card. Doing so could result in the loss of some or all data stored on the microSD memory card or the IS06.
- Do not drop or apply excessive force to the IS06 when there is a microSD memory card inside. Doing so could result in the loss of some or all data stored on the microSD memory card.
- Do not insert any liquid, metallic, flammable, or other foreign objects in the microSD memory card slot on the IS06. Doing so could result in a fire, electrical shock, or damage to the IS06.
- microSD memory card may become warm after long periods of use. This is not a malfunction.


### Inserting/Removing a microSD Memory Card

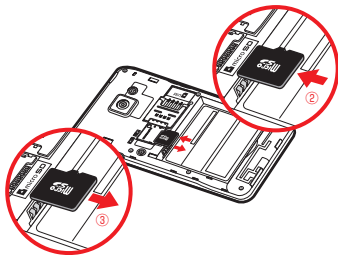

- ① Turn off the IS06. Remove the battery pack cover and the battery pack.
  - ② Insert the microSD memory card in the direction of the arrow. Make sure that the metallic terminal is facing down and the side with the microSD logo is facing up.
  - ③ Remove the microSD memory card by pulling it out in the direction of the arrow.
- You can save photos, movies, documents, music, and other files to a microSD memory card.
  - Some applications may not function without a microSD memory card.
  - To safely remove a microSD memory card, unmount it by tapping [menu] ► [Settings] ► [System] ► [microSD & phone storage] ► [Unmount microSD], or turn off your IS06 before removing.

## Turning On/Off the Power
 
### Turning On the Power



#### Hold down (Power)

- The logo will be displayed and after a few moments the lock screen will appear. See "Unlocking the Screen" (▶ P.20) to unlock the screen.
- After unlocking the screen, the display will turn off and the screen will lock automatically after a period of inactivity.

### Turning Off the Power



#### Hold down (Power) until the Phone options screen appears





- ▶  [Power off]
- ▶ [OK]

## Switching the Display Language

You can switch the display language for function names and other items to Japanese/Korean/Chinese/English.

A part or all the contents may not be displayed in Korean/Chinese/English depending on the application.

### Using the System Settings

 [メニュー] (menu) ▶  [設定] (Settings) ▶  [システム] (System) ▶  [言語とキーボード] (Language & keyboard) ▶ [言語を選択] (Select language) ▶ [日本語]/[한국어]/[中文]/[English]




### Using the Initial Settings Screen

When you first turn on the IS06 ▶ [言語変更] (change language) on the screen with the Android robot ▶ [日本語]/[한국어]/[中文]/[English]



## Setting Manner Mode/Airplane Mode




### Setting Manner Mode

**Hold down  (Power) until the Phone options screen appears ►   [Manner mode]**

- When manner mode is on,  appears in the status bar and all sounds, including ringtones and other sound effects, are turned off. (Excludes multimedia playback audio and alarms.)
- To turn off manner mode, hold down  (Power) again until the Phone options screen appears ►  [Manner mode].

### Setting Airplane Mode

**Hold down  (Power) until the Phone options screen appears ►  [Airplane mode]**

- When airplane mode is on,  appears in the status bar and all communications/networking functions such as Wi-Fi and Bluetooth® are turned off.
- To turn off airplane mode, hold down  (Power) again until the Phone options screen appears ►  [Airplane mode].

## Touch Panel

 
### Operating the Touch Panel

- The IS06 is equipped with a touch panel screen. You can perform actions by tapping items and keys on the screen with your finger.


- ❶ **Tap** Touch a menu or item and quickly remove your finger from the screen.



- ❸ **Flick Up/Down** Touch and quickly slide your finger up or down across the screen.

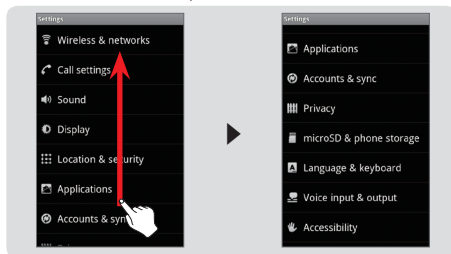

 - ❷ **Long Touch** Keep touching a menu or item.

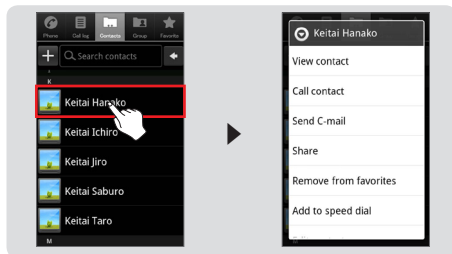

- ❹ **Flick Left/Right** Touch and quickly slide your finger left or right across the screen.



 
- 5 Drag** Keep touching the item and slide your finger to the desired location with the item.




- 7 Pinch Out (Zoom in)** Place two fingers on the screen and slide them apart.




- 6 Slide** Keep touching and slide your finger across the screen in the target direction.

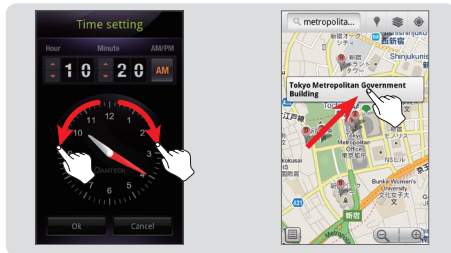

 - 8 Pinch In (Zoom out)** Place two fingers on the screen and slide them closer.

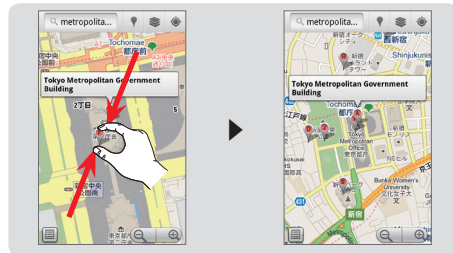

## Displaying the Home Preview Screen

- Tap  at the top of the Home screen to display the Home Preview screen in 3D.
- You can flick the Home Preview screen to rotate it left and right, or to tilt it up and down. Tap a Home screen in the 3D display to move to that Home screen.



 
<Home screen>



<Home Preview screen>

## Executing Widgets


### ① Executing 3D Widgets

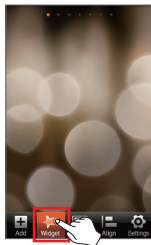


Tap  (Menu) on the Home screen ▶ Tap  [Widget]



 
Tap  [3D Widgets]

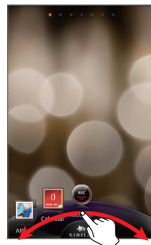


Slide to the left and right

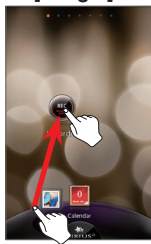 

 Long-touch the widget to select it and drag it to the desired location

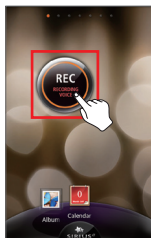


Tap the widget on the Home screen

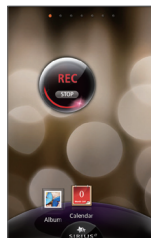 


The 3D widget will be executed



## 2 Executing Widgets

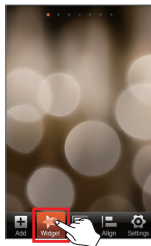 

 
Tap (Menu) on the Home screen ▶ Tap [Widget]

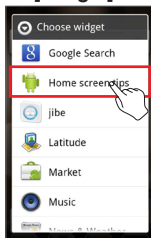


Tap the widget



 
Tap [Widgets]

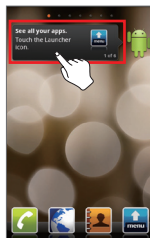

Tap the widget on the Home screen

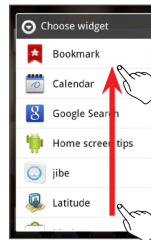 

Click up or down

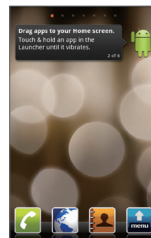 


The widget will be executed


## Locking the Screen


 
### Lock the Screen




- Press  (Power) while using the IS06 to turn off the display and lock the screen.
- After a period of inactivity, the display will turn off and the screen will lock automatically.





## Unlocking the Screen

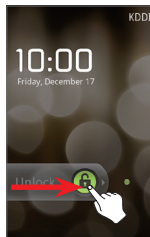 


- Press  (Power) or  (Home) to turn on the display.






## Slide Unlock

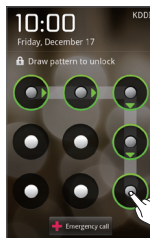 

- If a slide unlock has been set, slide your finger across the screen in the direction noted to unlock the screen.
- You can set a password or PIN number to input after slide unlock from  [menu] ►  [Settings] ►  [System] ►  [Location & security] ► [Set up screen lock].

## Unlock Pattern



- To further increase security, you can set an unlock pattern from  [menu] ►  [Settings] ►  [System] ►  [Location & security] ► [Set up screen lock].
- Draw the unlock pattern to unlock the screen.
- If you fail to unlock the screen five times in succession you cannot try again for 30 seconds.
- You can make an emergency call by tapping  [Emergency call] ► [110] (Police)/[118] (Regional Coast Guard Headquarters)/[119] (Fire institution).

# How to Input Character

Input characters by tapping keys on the on-screen keyboard (soft keyboard).

The IS06 comes with two types of soft keyboards: the Android keyboard for English and the iWnn IME keyboard for Japanese.

 
## Showing the Keyboard

### Tap the character input field



 
 
 

## Using the Android Keyboard


 
### Long-touch the character input field

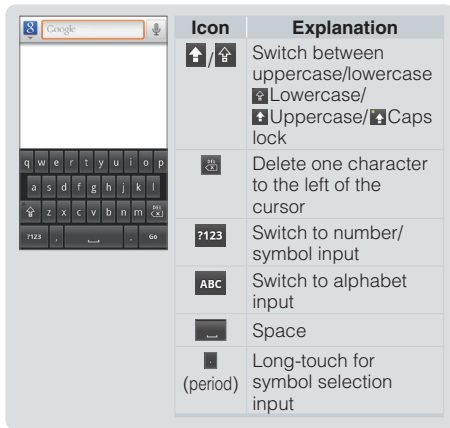► [Input method] ► [Android keyboard]




The image shows a screenshot of an Android phone's input field with a Google search bar and a soft keyboard. To the right of the keyboard is a table explaining the icons used for input method switching.

Icon	Explanation
	Switch between uppercase/lowercase ⬇️ Lowercase/ ⬆️ Uppercase/⬆️ Caps lock
	Delete one character to the left of the cursor
	Switch to number/symbol input
	Switch to alphabet input
	Space
 (period)	Long-touch for symbol selection input

- Long-touch  or  to show the Android keyboard settings/Input method selection screen.
- You can input European characters by long-touching the letters such as a, e, i, o, u, y, c, s, n.
- You cannot enter Japanese characters when using the Android keyboard.

## Using the iWnn IME Keyboard

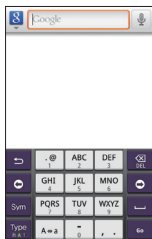 

### Long-touch the character input field

- ▶ [Input method]
- ▶ [iWnn IME]

### Icons and Their Functions

Icon	Explanation
	Return to the previous character assigned to the key
	Return to the state before character conversion
	Delete one character to the left of the cursor Long-touch to delete continuously
	Move cursor left Shorten the segment for conversion by one character Delete one character of wildcard prediction
	Move cursor right Lengthen the segment for conversion by one character Add one character of wildcard prediction






 

Icon	Explanation
	Display Emoji/Symbol/Emoticon * Emoji can only be used with “E-mail”, “C-mail”, and “SmartNote”.
	Convert to alphanumeric kana
	Insert space Convert (group paragraph conversion also possible)
	Change Input mode (Hiragana → Half-width Alphabet → Half-width Numeric) Long-touch to display menu (Change Settings, 10-key ⇔ QWERTY, Input Mode, Input Method)
	Finalize segment conversion during input
	Input carriage return
	Move to next input field
	Finish input
	Input half-width “-”
	Input half-width “+”
	Input “P” (pause)
10-key	Input the character displayed on the key (available characters depend on the input mode)

- The icons and menus that actually appear may vary depending on the application or function in use.

## Changing Input Modes

While entering character ▶ Long-touch

 ▶ [Input Mode] ▶ Select an input mode

Icon	Explanation	Icon	Explanation
	Hiragana-Kanji		Half-width Alphabet
	Full-width Katakana		Full-width Numeric
	Half-width Katakana		Half-width Numeric
	Full-width Alphabet		

- The input mode icon is also displayed on the status bar.
- The input mode may not be changed depending on the applications or functions in use.

# Basic Functions

Using Android

Home Screen

Menu Screen

Quick Search

 
# Using Android

## ► Using your IS06 for the first time

## ► Hold down (Power) ►




**Tap the Android robot**

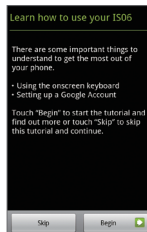

**Read usage instructions**



 **Read setup instructions**

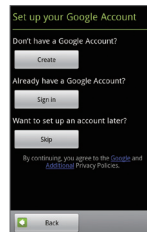

**Google account setup**

### NOTE

- If you register multiple accounts you can synchronize contacts and other information for each registered account.
- If you do not register a Google account, you may not be able to recover your contacts if they are lost. Be sure to register a Google account before using Android.

- When you turn on the IS06 for the first time and unlock the screen using slide unlock, you will see an illustration of the Android robot. Tap the robot to begin using your IS06.
- If you already have a Google account, tap [Sign in] to register your Google account to your IS06. Or you can create a new Google account by tapping [Create]. You must register a Google account in order to use Google online services such as Gmail, Google Talk, or Google Calendar or to download applications and other items from the Android Market.
- Follow the on-screen instructions to set up your Google account, configure your Google location settings and data backup settings, then tap [Next]. Tap [Finish setup] to return to the Home screen and begin using your IS06.

# Home Screen

- ▶ While using a function/application
- ▶ **⏏ (Home)** ▶

## What is the Home screen?

The Home screen is displayed first when you turn on the IS06, and is the screen from which you start all your applications, other functions, and menus. You can arrange the icons for your applications and other functions, menu icons, widgets, and set any wallpaper as you like.

## Using the Home Screen



- ① Displays notification icons, status icons, and the current time.
  - ② An application that you can use by adding it to the Home screen.
  - ③ Allows you to change the wallpaper on your Home screen.
  - ④ Tap to open the folder.
  - ⑤ Execute the application or function.
  - ⑥ Opens the Dialer.
  - ⑦ Opens the browser.
  - ⑧ Opens your Contacts.
  - ⑨ Displays a list of applications and other functions.
- Press **⏏ (Home)** when using an application or other function to display the Home screen at any time.
  - You can flick the Home screen to the left or right to change Home screens. There are a total of seven Home screens: three to the left, and three to the right. You can put icons and widgets on these Home screens as you like.



 
- ▶ While using a function/application
- ▶ (Home) ▶

## Viewing the Status Bar



- A notification icon will appear if you have a missed call or received a new mail. Status icons that inform you about signal strength, remaining battery life, and other essential status updates for your phone are also displayed.

## Showing the Notification Panel/Using Easy Setting

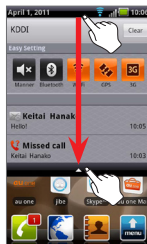


### Drag the Status Bar down

- The notification panel will open, and you will see detailed information about the status icons and easy setting icons.
- You can tap on these details to either use that function or change settings for that function.
- Simply tapping the easy setting icons turns on or off functions such as manner mode, Bluetooth®, Wi-Fi, GPS, and 3G.

Easy Setting Icons	✖ Manner	Bluetooth	Wi-Fi	GPS	3G
--------------------	----------	-----------	-------	-----	----

- To close the notification panel, drag the △ at the bottom of the screen up or tap (Back).

- 
- While using  
a function/  
application  
►  (Home) ►
- 

---

## Using Applications/Widgets/Folders






---

### Executing Applications and Widgets/Opening Folders

#### Tap the application/widget/folder

### Adding a New Widget or Icon

#### Long-touch the wallpaper on the Home screen

Icon	Explanation
 [Shortcuts]	Add applications to the Home screen in the form of a shortcut. You can also add shortcuts for bookmarks, music playlists, contacts, settings, and other functions.
 [3D Widgets]	Add 3D widgets for photo albums, calendars, and other functions to the Home screen.
 [Widgets]	Add widgets such as the RSS reader, YouTube, Google Search to the Home screen.
 [Folders]	Add shortcuts to folders such as the Contacts to the Home screen. Folders can also be used as containers to organize the icons on the Home screen.
 [Wallpaper]	Change the wallpaper on the Home screen.

 
- ▶ While using a function/application
- ▶ — (Home) ▶

### Moving Applications/Widgets/Folders



- Long-touch the application/widget/folder to move
- ▶ Drag to the desired location


### Deleting Applications/Widgets/Folders

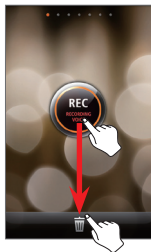

- Long-touch the application/widget/folder to delete
- ▶ Drag to 

- 
- ▶ While using a function/application
  - ▶ **⏪ (Home) ⏩**
- 

## Managing Folders

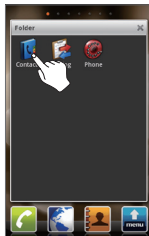 

### Tap the Folder

 
- The folder will open, and you will see the contents of that folder. Tap any of the icons in that folder to execute that application or function.
- You cannot put other folders or widgets inside a folder.

# Menu Screen



## Using Applications and Other Functions

### Executing an Item on the Menu Screen

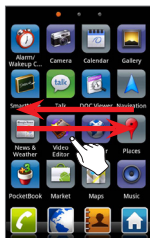

#### Tap the Icon

- When you open the Menu screen you will see icons for all the applications and functions you can use on your IS06.
- If you execute any other application or function or press  $\equiv$  (Home) to return to the Home screen while you are already using an application or function, the application or function currently used will not close so that you can return to it later.
- When you are using an application or function, you can access additional functions by tapping  $\equiv$  (Menu), or you can use search functions unique to that application or function by pressing  $\text{Q}$  (Search) on the side of the IS06. Some applications and functions may not support the use of  $\equiv$  (Menu) and  $\text{Q}$  (Search).



## Quick Search



### Using Quick Search


#### Text Search

#### Enter a keyword into the Quick Search input field

- Press  (Search) on the side of the IS06 to display the Quick Search screen.
- When you are already using another application (Dialer, Gmail, browser, etc.), pressing  (Search) may allow you to use search functions unique to that application.

#### Voice Search

#### ► Say the keyword into the microphone while [Speak now] is displayed

- The browser will load and Google search results will be displayed.
- You can also hold down  (Search) to display the Google Voice Search screen.

# Phone Functions

**Making a Phone Call**

**Receiving a Call**

**In Call Functions**

**Call Log**

**Contacts**

# Making a Phone Call



## Entering a Phone Number to Call



**Enter the phone number starting with the area code** ►

- If you make a mistake entering the phone number, tap to delete the last digit you entered. Long-touch to delete all digits.
- After you enter four digits or more, the Dialer will automatically search through the Contacts and display search results. Tap to view all search results. Select a phone number from the search results to call it.
- Tap with no phone number entered to open your call log. Long-touch to re-dial the last number you called.

## Making International Calls

**Calling Internationally From Your IS06 (au International Call Service)**

**Enter international access code “001010” or “010” ► Enter country code ► Enter area code ► Enter the phone number you want to dial** ►

 
**For more information on au International Call Service, dial either of the following numbers:**

- From au cell phones (toll-free): 157 (area code not required)
- From fixed-line phones (toll-free): 0077-7-111 (Open 9:00 to 20:00 everyday)






## Searching and Calling From Your Contacts

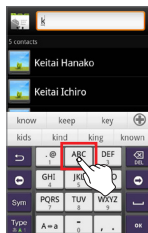


**Press  (Search) ► Enter all or a portion of a name ► Select a contact ► **

- You can use the search Contacts function by pressing  (Search) even while using the Phone, Call log, Group, or Favorite.


## Making a Call Using the Call Log

** [Call log] ►  to the right of the phone number**

 
## Receiving a Call

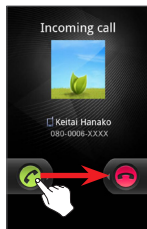

### Drag to the right when receiving an incoming call

- When receiving a call, the following information will appear.
  - If the caller allows showing their phone number, their phone number will appear on the display.
  - If that phone number and name are registered in your Contacts, the caller's name and other information will be shown. If an image for that contact is registered, the image will also be displayed.
  - If the caller does not allow showing their phone number, the reason for blocking will be displayed.  
"ID Unsent" "Payphone" "Not Support"
- Tap [End] to end the phone call.

### When You Missed a Call

-  will appear on the status bar.
- Open the notification panel to see what time the call was received and the phone number of the caller. You can also tap any relevant information to view your call log.

## In Call Functions

► In a call ►

## Call Log



► [Call log] ►

### Adjusting the Receiver Volume

Press (Volume) to adjust the receiver volume to six different levels

### Viewing Your Call Log

#### Select a call log

Key Descriptions	All logs	Incoming	Outgoing	Missed	C-mail
------------------	----------	----------	----------	--------	--------

- You can view all logs, incoming/outgoing/missed, and C-mail logs.

### Making a Call From Your Call Log

Select the call log to call ► [Call]

### Sending E-mail/C-mail From Your Call Log

Long-touch a phone number ► [Send E-mail]/[Send C-mail]

# Contacts





---

## Adding a New Contact

---

### Add a New Contact from the Dialer

 [Phone] ► Enter phone number ►  ► [Create new contact]

### Add a New Contact from the Call Log

 [Call Log] ► Long-touch a relevant phone number ► [Add to contacts] ► [Create new contact]

### Add a New Contact from the Contacts

 
 [Contacts] ►  (Menu) ►  [New contact] ► Enter each item ► [Done]



## Viewing Your Contacts

## Viewing Individual Contacts

### Quick Contact

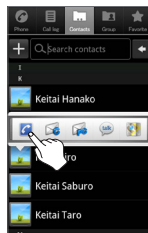

### Select contact's photo ▶ Select icon

Icon  
Examples

	Make phone call		Send C-mail
	Send E-mail		Chat
	Send PC-mail		
	Send Gmail		
	View position using Google Maps		

### Deleting a Contact

#### Long-touch contacts ▶ [Delete contact]

- By tapping (Menu) ▶ [More] ▶ [Delete], you can delete multiple, or all, contacts at once.
- After synchronizing your Contacts, deleting a contact on your IS06 will also delete that contact from your Google Account Contacts.

### Editing a Contact

#### Long-touch contacts ▶ [Edit contact]

# Mail Functions

E-mail

C-mail

PC-mail

# E-mail



## Configuring E-mail Initial Settings

The initial settings screen is displayed the first time you use the E-mail application after purchase. During initialization, an E-mail address is automatically set. You can change this E-mail address.

### [OK]

- You need to sign up for IS NET to use E-mails (XXX@ezweb.ne.jp). If you do not have signed up at the time of the purchase, contact an au shop or the Customer Service Center.
- Initial settings are not necessary if you change your phone model from an au cell phone with which you were already using E-mails.
- E-mail can be exchanged with cell phones supporting E-mails and computers. Besides text, data like photo and video can be sent as well.
- The packet communication charge for sending and receiving E-mails applies to the amount of data sent and received.
- E-mail transmission may require some time depending on the signal strength of the area for E-mails with attachment.

## E-mail Contacts

With the IS06 software V06.1X.XX released in November 2011, contact information is no longer stored in E-mail Contacts but is registered in IS06 Contacts. This manual provides explanation for the IS06 updated to the software V06.1X.XX Note that procedures and settings differ if your IS06 is not updated to this software version. Each contact stored in E-mail Contacts must be registered individually to the IS06 Contacts.

E-mail ringtone "Individual setting" and "receive all" used in E-mail Contacts can be kept after the update.



- The software version of your phone can be checked from “V” in [MENU] ► [Settings] ► [System] ► [About phone] ► [Board and Software version].
- With the software V06.1X.XX, the contents stored in E-mail Contacts before the update can be seen and deleted, but cannot be edited anymore.

### Transferring E-mail ringtone “Individual setting” and “receive all” from E-mail Contacts

After the software V06.1X.XX update, the “Version up notice” screen is displayed when using the E-mail application. You can choose to transfer the E-mail ringtone “Individual setting” and “receive all” used in E-mail Contacts to “Inform settings” and “E-Mail receive mode individual settings” after the update.




#### [Yes] ► [Yes] ► [OK]

- These settings can also be transferred from backup data stored in a microSD memory card.
- When backup data is available from both the IS06 and a microSD memory card, a data selection screen is displayed.
- When several Contacts lists are registered, a Contacts list selection screen is displayed.
- When there is no E-mail Contacts data neither in the IS06 nor the microSD memory card, like when data was deleted or when you did not use this function, the “Version up notice” screen is not displayed.
- Put ☒ (check) in “Don’t show this dialog again.” and tap [Yes]/[No] in the “Version up notice” screen to prevent this screen from appearing again in the future when using the E-mail application.
- Tap (Menu) ► [E-mail Contacts view] ► (Menu) ► “Transfer Ringtone/Receive mode data” to transfer the settings.







## Registering E-mail Contacts contents to IS06 Contacts

 (Menu) ►  [E-mail Contacts view] ► **Select a group**  
► **Select a contact** ►  (Menu) ► **[Add to Contacts]**  
► **[Create new contact]** ► **[Done]**

- Tap an existing contact after tapping [Create new contact] to add information to a contact already registered.
- When backup data is available from both the IS06 and a microSD memory card, a data selection screen is displayed.
- When several Contacts lists are registered, a Contacts list selection screen is displayed.
- When several Google accounts are registered in the IS06, a registered account selection screen is displayed.



### Viewing E-mail Contacts

 (Menu) ►  [E-mail Contacts view] ► **Select a group**  
► **Select a contact**

- When backup data is available from both the IS06 and a microSD memory card, a data selection screen is displayed.
- When several Contacts lists are registered, a Contacts list selection screen is displayed.

### Deleting E-mail Contacts



 (Menu) ►  [E-mail Contacts view] ►  (Menu)  
► **[Delete E-mail contacts]** ► **[Yes]**

- When backup data is available from both the IS06 and a microSD memory card, a data selection screen is displayed.
- When several Contacts lists are registered, a Contacts list selection screen is displayed.






## Sending E-mail



 [New] ▶ [Recipient] ▶ [Direct input]  
▶ Enter recipient ▶ [Done] ▶ [Subject]  
▶ Enter subject ▶ [Return to edit body]  
▶ Enter message ▶  [Send] ▶ [OK]

<E-mail composition screen>

- The recipient can be selected from Contacts, E-mail incoming and outgoing logs, etc.
- Tap  [Save] to save the E-mail in the [Draft] folder.
- Tap  [Edit] to edit the message content.
- Tap  [Discard] to discard the E-mail.



### Attaching Data

**On the E-mail composition screen, tap [Attachment] ► [Add attachments]**

- A maximum of 5 files (no more than 2 MB in total) can be attached.

### Decorating a Message

**On the E-mail composition screen, tap  [Deco.]**

- You can create decorated mails by changing the text and background colors or adding Decoration emoticon.

---

## Viewing Received E-mails

---

**[Inbox] ► Select an E-mail**

### Opening/Saving Attachments

**[Inbox] ► Tap  /  on E-mails with files attached ► [Open] / [Save]**

### Checking and Receiving New E-mails

** [Check]**

- You can check the new mails and receive them when the [Auto Receive] function is disabled or when the reception failed.

---

## Check the E-mails in Each Folder

---



**Select a folder ► Select an E-mail**



## Setting Mail Filters



Mail filters have functions to receive and reject specific mail messages and to reject mail messages spoofing cell phones or PHSs.

### Setting the Mail Filter as Recommended

 (Menu) ▶  [Setting] ▶ [E-mail settings] ▶ [Other settings] ▶ [OK] ▶ [オススメの設定はこちら] (See Recommended Settings) ▶ [登録] (Register)

- Set the mail filter that enables to reject spoofing or auto-forwarded mail messages, and to receive mail messages from cell phones, PHSs or PCs.

### Setting Details of the Mail Filter

 (Menu) ▶  [Setting] ▶ [E-mail settings] ▶ [Other settings] ▶ [OK] ▶ [迷惑メールフィルター] (Mail Filter) ▶ Select ☐ (Entry field) ▶ Enter your security code ▶ [送信] (Send)

カンタン設定 (Simple Settings)	1. 「携帯」「PHS」「PC」メールを受信 (1. Receive Mail Messages from Cell Phone, PHS or PC)	Rejects spoofing or auto-forwarded mail messages, and receives mail messages from cell phones, PHSs or PCs.
	2. 「携帯」「PHS」メールのみを受信 (2. Receive only Mail Messages from Cell Phone or PHS)	Rejects PC addresses, mail newsletters, spoofing mail messages or auto-forwarded mail messages, and receives mail messages from cell phones or PHSs.



詳細設定 (Advanced Settings)	一括指定受信 (Collective Receive Setting)	Receives or rejects all mail messages from the Internet or cell phones.
	なりすまし規制 (Spoof Restriction)	Rejects mail messages sent with an alleged sender address. You can set the following levels; 高 (High), 中 (Medium), 低 (Low).
	指定拒否リスト設定 (Reject Mail Address List Setting)	Rejects mail messages from certain mail addresses, domains or parts of addresses to the left of "@" that are contained in the specified address list.
	指定受信リスト設定 (Allowed Address List Setting)	Prioritizes reception of mail messages from certain mail addresses, domains or parts of addresses to the left of "@" that are contained in the specified address list. <ul style="list-style-type: none"><li>• To block mail messages from addresses other than the specified ones, unmark all items in 一括指定受信 (Collective Receive Setting) to set to off (to reject receiving).</li></ul>
	指定受信リスト設定 (なりす まし・転送メール許可) (Allowed Address List Setting (Spoofing or Forwarded Mail Messages))	Avoids the mail block due to なりす まし規制 (Spoof Restriction) setting, and receives auto-forwarded mail messages.
	HTMLメール規制 (HTML Mail Restriction)	Rejects mail messages in HTML format.



 
詳細設定 (Advanced Settings)	URLリンク規制 (URL Link Restriction)	Rejects mail messages that include a URL.
	拒否通知メール返信設定 (Block Mail Notification Setting)	Sets whether to send a receiver error (address unknown) mail message to the sender of the rejected mail message.
設定確認／設定解除 (Check Settings/ Release Settings)		Checks the setting status of the mail filters and releases all the settings at one time.
PC設定用ワンタイムパスワード発行 (Issue One Time Password for PC Setting)		Issues a one time password to set the mail filter on your PC. The password is available within 15 minutes after issuance.
設定にあたって (Notes on Setting Mail Filter)		Displays the explanation for setting mail filters.

- Security code is the four-digit number you wrote on your subscription form.
- If the security code is incorrectly entered three times consecutively during a single day, the mail filter setting operation will be disabled until the next day.
- Note that you cannot receive mail messages once rejected by mail filters. Be careful when you set mail filters.

# C-mail



## Sending C-mail

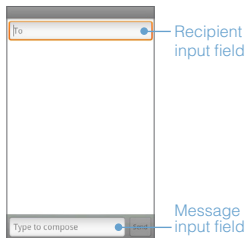

<C-mail Composition screen>

**[Create new] ▶ Tap the recipient input field ▶ Enter recipient phone number ▶ Tap message input field ▶ Enter message ▶ [Send]**

- C-mail is a service that uses phone numbers as addresses to exchange messages between cell phones. C-mail messages can be sent and received also between cell phones from other companies.
- A maximum of 70 full-width/140 half-width characters can be entered per message.
- C-mail messages of more than 51 full-width/101 half-width characters may be divided and received in 2 C-mail messages depending on the destination.
- Some Emoji may not be displayed properly when sending C-mails to a different model of cell phone.
- Even if the C-mail has been sent successfully, a transmission error message may sometimes be displayed if the signal is weak.
- C-mail cannot be sent if you are in a location with no signal or if your IS06 is set to airplane mode.





## Viewing Received C-mails



<Thread list screen>



<Thread details screen>

### Select a contact on the thread list screen ► Check the contents on the thread details screen

- On the thread details screen, C-mails received from the contact and those sent to him/her are displayed as a dialog.
- You can send a C-mail reply by entering a message in the input field on the bottom of the thread details screen, and tapping [Send].
- Receiving C-mails is free of charge.
- C-mail messages of more than 51 full-width/101 half-width characters are divided and received in 2 C-mail messages.
- Received mails may not be displayed properly depending on the content.
- C-mail cannot be received if you are in a location with no signal or if your ISO6 is set to airplane mode.

Message  
input field

---

## Using the Earthquake Early Warning

---

The Earthquake Early Warning is a service that delivers Earthquake Early Warning distributed by the Japan Meteorological Agency to au cell phones in the vicinity of the earthquake center. The IS06 is set to receive Earthquake Early Warning by default.

When you receive an Earthquake Early Warning, secure a safe location depending on your surroundings and remain calm.


- When an earthquake above level 5.0 on the Japanese scale is anticipated, the Earthquake Early Warning will immediately provide information on where any earthquake with a seismic intensity of 4.0 or more is expected to occur.
- Immediately after an earthquake occurs, the earthquake (P waves or initial tremors) are captured and the location, scale, and expected seismic intensity are automatically calculated. The system then notifies affected regions as quickly as possible some seconds in advance before strong tremors (S waves or main tremor) begin.
- Regions near the epicenter may not receive the Earthquake Early Warning before strong tremors begin.
- This service is available within Japan only.
- The Earthquake Early Warning is available completely free of charge.
- KDDI (au) cannot be held responsible for any losses or damages incurred due to interrupted communications or system outages resulting in non-received or delayed information, the content of that information, or any other issues related to this service.
- For more details about the Japan Meteorological Agency Earthquake Early Warning, refer to the Japan Meteorological Agency homepage.  
<http://www.jma.go.jp/> (for PC)



## Viewing Received Earthquake Early Warning

When an Earthquake Early Warning is received, a special warning tone will sound and the phone will vibrate along with a notice on the screen.

### Slide the status bar to the bottom ► Select the Earthquake Early Warning information

- When an Earthquake Early Warning is received, a warning tone (cannot be changed) sounds and  is displayed in the status bar.
- Earthquake Early Warning cannot be received when in a call, and in some cases when receiving or sending a C-mail/e-mail or when using the browser or other applications.
- Earthquake Early Warning cannot be received in some cases when the power to the mobile phone is turned off, or when in an area with poor signal quality (such as in tunnels or below ground). In these cases, missed Earthquake Early Warning cannot be received again.
- This system is not the same as those that distribute Earthquake Early Warning to TV, radio, or other forms of media and therefore the time when such notifications are received may vary from those other media sources.
- In some cases you may receive information regarding a region different from that of your current location.
- You cannot change the Earthquake Early Warning tone or adjust its volume.



## Setting Up the Earthquake Early Warning

### (Menu) ▶ [Settings]

Receive Setting	Set whether or not you want to receive Earthquake Early Warning. [Receive] [Not Receive]
Check Ring/Vib	This option allows you to hear the warning tone that is played when an Earthquake Early Warning is received and feel the vibration that occurs.
Sound in manner mode	Set the warning tone when in manner mode. The phone vibrates regardless of the current [Vibrate] setting. [Noti. with ringtone & vibration] [Noti. with only vibration] <ul style="list-style-type: none"><li>• When set to [Noti. with ringtone &amp; vibration], the warning tone will play and the phone will vibrate, even when the phone is set to manner mode or silent mode.</li><li>• When set to [Noti. with only vibration], the phone will only vibrate without a warning tone when set to manner mode or silent mode.</li></ul>



## C-mail Safety Block

C-mail safety block is a function that allows you to reject C-mails that include URLs (http://△△△, https://△△△) or phone numbers in the C-mail message text.

- C-mail safety block is valid by default. Cancel the setting if you want to receive C-mails that include URLs and phone numbers in the message text.

### Setting the C-mail Safety Block

You can set the C-mail safety block by sending C-mail to a specified phone number.

Canceling the setting	Input "Cancel" in the C-mail message and send to 09044440010.
Enabling the setting	Input "Enable" in the C-mail message and send to 09044440011.
Confirming the setting	Input "Confirm" in the C-mail message and send to 09044440012.

- Sending the C-mail for this setting is free of charge.
- A C-mail reporting that settings are complete arrives from "09044440012".


### When a C-mail is Blocked by the C-mail Safety Block

When a C-mail is blocked by the C-mail safety block, "Unable to send to selected person." is displayed and the C-mail is not sent.



## Setting Up a C-mail Receiving Filter

### (Menu) ► [Settings] ► [Receiving filter settings]

Specified No. setup	Specify a particular phone number to block incoming C-mails
Specified No. list	<p>Select a phone number to block incoming C-mails by tapping  (Menu) ► [Quote Contacts], [Quote Outgoing call log], [Quote Incoming call log], [Quote C-mail log], or [Direct input]</p> <ul style="list-style-type: none"><li>• You can register up to 20 phone numbers.</li><li>• Long-touch an already registered phone number to edit or delete that number.</li></ul>
Unregistered Contacts	Block C-mails from all phone numbers that are not registered in your Contacts

## PC-mail



### Setting Up PC-mail

You can send and receive PC-mail compatible with POP3, IMAP, or Exchange on your IS06.





In order to use PC-mail, you need to configure your user name, password, incoming server, and outgoing server settings. Please refer to your PC-mail provider for questions about these settings.

The “type of account”, “incoming server settings”, and “outgoing server settings” will automatically be detected for some mail addresses.

#### Adding a PC-mail Account (First-time Registration)

**Enter mail address and password ► [Next] ► Select account type ► Incoming server settings ► [Next] ► Outgoing server settings ► [Next] ► Account options ► [Next] ► Enter account name and name to display for outgoing mail ► [Done]**

#### Adding a PC-mail Account

** (Menu) ►  [Accounts] ►  (Menu) ►  [Add account] ► Enter mail address and password ► [Next] ► Select account type ► Incoming server settings ► [Next] ► Outgoing server settings ► [Next] ► Account options ► [Next] ► Enter account name and name to display for outgoing mail ► [Done]**

- You can add multiple PC-mail accounts and manage the incoming/outgoing mail separately for each account.



## Managing Received PC-mail

### Viewing Received PC-mail

#### Select account ► Select mail in Inbox

- Tap ◀ / ▶ to view the previous/next mail.
- Tap [Reply], [Reply all], or [Delete] to perform the respective action while the contents of a mail are displayed.
- You can star important mails so that they are easy to find later. Tap ★ to the right of the subject while the contents of a mail are displayed to star that mail. Or tap ★ to the right of a mail in your Inbox to star that mail.

### Viewing Incoming PC-mail From All Registered Accounts

#### ✉[Combined Inbox]

- Register multiple PC-mail accounts to display ✉[Combined Inbox].
- You can also display ✉[Combined Inbox] with only one mail account registered by tapping ☰(Menu) ► 📧[Account].

### Viewing Starred Mails



#### ★[Starred]

- ★Star important mails or mails you want to read again later and you can view them from your Starred Inbox.





### Viewing Your Inbox/Drafts/Outbox/Sent/Trash Mails

Select account ►  (Menu) ►  [Folders] ► Select Inbox/  
Drafts/Outbox/Sent/Trash

---

### Sending PC-mail

Select account ►  (Menu) ►  [Compose] ► Enter recipient,  
subject, and message body ► [Send]

- You can send a mail to multiple contacts by separating their mail addresses with a comma (,) or semi-colon (;).
- You can save a mail you have written as a draft instead of sending it immediately.
- You can also include photos, movies, documents, and other data as an attachment to your mails.

# Google Functions

Using Google Services


Gmail

Android Market

Google Voice Search

Using Other Google Services





# Using Google Services

- Using your IS06 for the first time
- Hold down  (Power) ►

## Registering an Existing Google Account

### Registering an Existing Google Account for the First Time

**Tap the Android robot ► [Begin] ► [Next] ► [Sign in] ► Enter your username and password ► [Sign in] ► Follow the on-screen instructions**

- After the Google account registration screen, the Google Location Setup screen and Backup Data Setup screen will be displayed. You must perform the Google location setup so that applications such as Google Maps can check your current physical location. If you want to back up some of your IS06 settings and application data to Google's servers, configure your data backup settings.
- You can register an existing Google account to your IS06 or create a completely new Google account from your IS06 directly.
- After registering your Google account to your IS06, you will be able to use Google services such as Gmail, Google Calendar, and Google Talk as well as download applications from the Android Market.
- You can only use the Google account you registered to your IS06 initially for Google Talk and some other functions and menus. Be aware of this when registering Google accounts to your IS06.
- To delete the Google account you registered first, select  [menu] ►  [Settings] ►  [System] ►  [Privacy] ► [Factory data reset] to reset your IS06 to its factory default settings.
- Some Android Market applications may not be compatible with the IS06.
- Google applications and services are subject to change without any prior notice.





---

## ► Using Google services for the first time ►

---

### Registering an Existing Google Account to Use Google Services for the First Time

**[Next] ► [Sign in] ► Enter your username and password ► [Sign in] ► Follow the on-screen instructions**

- If you did not set up your Google account the first time you used your IS06, the Google Account Registration screen will appear the first time you use some Google services that need Google account.
- You can only use the Google account you registered to your IS06 initially for Google Talk and some other functions and menus. Be aware of this when registering Google accounts to your IS06.
- To delete the Google account you registered first, select  [menu] ►  [Settings] ►  [System] ►  [Privacy] ► [Factory data reset] to reset your IS06 to its factory default settings.

---

## ► When registering a Google account ►

---

---

### Creating a New Google Account

---

**[Create] ► Enter your first name, last name and username ► [Next] ► Follow the on-screen instructions**

- If you do not have a Google account, or if you want to create a new Google account, you can create one directly from your IS06.

# Gmail









## What is Gmail?

Gmail is a mail service provided by Google. You can view and send Gmail from your IS06. Refer to the Google homepage for more detailed instructions on how to use Gmail.

## Viewing Your Inbox

### View mails

- If you have registered multiple Google accounts, the Inbox for the last account you checked will be displayed.
- Mails will appear in the order they were received. The number of unread mail messages in your Inbox and the mail account currently viewed are shown at the top of the screen.
- Add a  (Check) beside any mail to use the Archive, Delete, and Labels functions.
- Archived mails will not be shown in the Inbox. To view archived mails, tap  (Menu) ►  [Go to labels] ► [All Mail] in that order.
- Tap  to the right of a mail to star that mail. To view starred mails, tap  (Menu) ►  [Go to labels] ► [Starred] in that order.

### Switching Gmail Accounts









 
 (Menu) ►  [Accounts] ► **Select an account**

- You can switch accounts and add new accounts.
- The number to the right of an account shows the number of unread mails for that account.



## Viewing the Contents of a Received Mail

### Select a mail

- Tap  to the right of the sender's name to star the mail.
- Tap  [Reply] to the right of the sender's name to compose a reply to the mail. Tap  to use  [Reply all] and  [Forward].
- Read mails will appear with a gray background in the Inbox to differentiate them from unread mail.
- Tap [Archive] below the mail body to save the mail in your Archive. To view archived mails, tap  (Menu)  [Go to labels]  [All Mail] in that order.
- Tap [Delete] below the mail body to delete the mail.
- Tap  below the mail body to view the previous/next mail.

---

### Sending Mails

---

 (Menu)  [Compose]  Enter recipient, subject, message body 


- You can save a mail you have written as a draft instead of sending it immediately.
- You can also include photos as an attachment to your mails.

---

### Showing Labels

---

 (Menu)  [Go to labels]

- Select a label to view all mails set with that label.
-  mails can be viewed and managed together in the Starred Inbox.

# Android Market



## What is the Android Market?

Android Market is an application distribution service run by Google. You can download many free and fee-based applications for your IS06 using the Android Market.

Refer to the Google homepage for more detailed instructions on how to use the Android Market.

## Using the Android Market

### Downloading Applications

**Select an application to download ► View application information ► [Download]/Select the price ► [Accept & download]/[Accept & buy]**

- You must register a Google account to your IS06 in order to use the Android Market.
- Application downloads and install completion notifications will appear in the status bar. When installation finishes, the icon for the installed application will appear on the Menu screen.
- To download fee-based applications, you must use the au kantan payment method or the Google Checkout service. Follow the on-screen instructions to perform the necessary steps.

### Searching for Applications



**(Search)**

- Enter some characters to search for an application on the Search screen.



## Deleting Downloaded Applications

 (Menu) ►  [My Apps]  
► Select an application ► [Uninstall] ► [OK]

### NOTE

- You take full responsibility for any applications you download. Check to make sure an application is safe before installing it. Some applications may contain viruses, cause data corruption, or transmit your current location, usage logs, and/or personal information stored on your cell phone to the Internet.
- au takes no responsibility for any damages or problems caused by applications you install on your cell phone. Repairing any such problem may not be covered under the warranty and only be performed for a fee.
- au takes no responsibility for any losses to you or any other third party caused by applications you install on your cell phone.
- Some applications may not function without a microSD memory card.
- Some applications may prevent your phone from entering sleep mode, or will run in the background severely wasting the battery.
- You can uninstall any applications you no longer need.
- If you believe an application is causing a problem with your IS06, uninstall the relevant application immediately. However, note that this will not solve all problems in all cases.



# Google Voice Search



---

## Using Voice Search

---

**Say the keyword into the microphone while [Speak now] is displayed**

- The browser will load and your Google search results will be displayed.

## Using Other Google Services



---

### Using Google Talk

---

Google Talk is a chat service provided by Google.

Refer to the Google homepage for more detailed instructions on how to use Google Talk.

---

### Using Google Maps

---

Google Maps is an online map service provided by Google. You can use Google Maps to view your current location on the map and find directions to your destination. You can superimpose aerial photographs and traffic information (only in areas where such data is provided) directly on the map.

Refer to the Google homepage for more detailed instructions on how to use Google Maps.

---

### Using Google Maps Navigation

---

Google Maps Navigation is a navigation service provided by Google. This service provides you with navigation information to your destination.

Refer to the Google homepage for more detailed instructions on how to use Google Maps Navigation.



---

## Using Google Places

Google Places is an online information service provided by Google. You can use Google Places to search for information related to shops, services, and places. Refer to the Google homepage for more detailed instructions on how to use Google Places.



---

## Using Google Latitude

Google Latitude is a location information sharing service provided by Google. You can use Google Latitude to see where your friends are on the map, send them mail messages, and more. Refer to the Google homepage for more detailed instructions on how to use Google Latitude.



---

## Using Google News and Weather

Google News and Weather is a news and weather service provided by Google. Refer to the Google homepage for more detailed instructions on how to use Google News and Weather.



---

## Using Google Calendar

Google Calendar is an online calendar service provided by Google. You can use Google Calendar to sync all calendars saved online to your Google account to your ISO6 for easy schedule management. Refer to the Google homepage for more detailed instructions on how to use Google Calendar.

# Internet Functions

Connecting to the Internet

Browser

au one Market

# Connecting to the Internet

- You can connect to the Internet on your IS06 by either of the following methods.
  - Packet communications (IS NET, au.NET)
  - Wi-Fi

---

## Using Wi-Fi

---



- You can connect to the Internet using the wireless LAN setup in your home or through public wireless LANs when you are out on the go.
- To connect from your home, you will need an Internet connection and an access point (wireless router) so that you can connect wirelessly. You will also need to know the network SSID (network name, SSID, ESS-ID) and password (WEP key, WPA key, shared key, encrypted key) for your wireless access point.
- To connect to a public wireless LAN, check the homepage of the public wireless LAN provider to confirm the current status of the access point beforehand. In some cases you may need an account with the service provider and an ID and password for authentication.

## Enabling Wi-Fi

 [menu] ▶  [Settings] ▶  [System] ▶  [Wireless & networks] ▶ Add a  (Check) beside [Wi-Fi]

## Registering and Connecting to an Access Point

 [menu] ▶  [Settings] ▶  [System] ▶  [Wireless & networks] ▶ [Wi-Fi settings] ▶ Select network SSID ▶ Enter password ▶ [Connect]

- Enter the WEP key or shared key for the wireless access point in the password field. If the access point does not require a password, the password entry screen will not appear.
-  (Check) [Show password] to view the password as you enter it.
- To connect to an open network, add a  (Check) beside [Network notification].

---

## Using Data Communication Services

---

 [menu] ▶  [Settings] ▶  [System] ▶  [Wireless & networks] ▶ [Mobile networks] ▶ Add a  (Check) beside [Data enabled]

- You can connect to the Internet and transmit packets through IS NET or au.NET.
- IS NET is an Internet connection service for smartphones. If you have signed up for EZ WIN before using any IS-series phone, you do not need to sign up for IS NET. The monthly fee for IS NET is 315 yen (tax included) plus additional transmission fees.
- If you are not registered for IS NET, use au.NET instead. The monthly fee for au.NET is 525 yen (tax included, only for months you use au.NET) plus additional transmission fees.

# Browser





## Displaying a Web Page



- The au one homepage will be displayed when you launch the browser (by factory default settings).

### Using the Search Box (URL Input Field)

#### Enter keyword or URL into the search box ► ➡ (Go)

- If you enter a URL into the search box, the web page for that URL will be displayed.
- If you enter a search keyword in the search box, the search results will be displayed. Tap any relevant item in the list.
- Tap  to view your bookmarks.
- To use the search box on your Home screen, press  (Search) on the side of your IS06.

## Possible Actions While Displaying a Web Page

- Pinch out to zoom in, and pinch in to zoom out. You can also lightly tap twice to zoom in and zoom out.
- You can also tap  /  that appear while dragging the screen to zoom in and zoom out.




## Opening a New Window

 (Menu) ►  [New window]

- The au website (<http://auone.jp/> by default) is displayed in a new window. Enter the URL of the website you want to visit or a keyword in the Search Box (URL Input Field).



## Switching Between Windows (When Multiple Windows Are Open)

 (Menu) ►  [Windows]

- A list of all currently open websites will appear. Tap the web page you want to view and that page will be displayed.
- Tap  to close the window.



## Bookmarking the Currently Displayed Web Page

 (Menu) ►  [Bookmarks] ► [★Add] ► Enter/view name and location ► [OK]

- A list of web pages that you have bookmarked will appear by tapping  (Menu) ►  [Bookmarks]. Tap any web page you like from your bookmarks to quickly connect to it.

## Downloading Files

**Long-touch the specified item (character, icon, etc.) ► [Save link]/[Save image]**

- Downloaded files are stored on your microSD memory card.  (Menu) ►  [More] ► [Downloads] allows you to find all of your previously downloaded files.



## au one Market



- au one Market is an application distribution site for au Android smartphones running au Android by KDDI (au).
- You can download many free and fee-based applications and widgets for your IS06.
- Terms of Service are displayed for the first time you activate au one Market. Check the content and tap [同意] (Agree) to use au one Market.
- An au one ID is required to use some of the au one Market functions. Refer to the Instruction Manual (Japanese) for more information about au one ID registration.

---

### Downloading Applications

---

#### Select an application to download ▶[ダウンロード] (Download)

- Download procedures may differ depending on the distributor. Follow the on-screen instructions.
- A security password is required to buy fee-based applications using au kantan payment method. The security password is your security code by default. The security code is the four-digit number you wrote on the subscription form.
- Application download and installation completion notifications will appear in the status bar. When installation finishes, the icon for the installed application will appear on the Menu screen. Installed widgets can be set and executed from the Home screen.

## Deleting Downloaded Applications

 [マイアプリ] (My apps) ▶ Select an application ▶ [アンインストール] (Uninstall) ▶ [はい] (Yes)

### NOTE

- You take full responsibility for any applications you download. Check to make sure an application is safe before installing it. Some applications may contain viruses, cause data corruption, or transmit your current location, usage logs, and/or personal information stored on your cell phone to the Internet.
- au takes no responsibility for any damages or problems caused by applications you install on your cell phone. Repairing any such problem may not be covered under the warranty and only be performed for a fee.
- au takes no responsibility for any losses to you or any other third party caused by applications you install on your cell phone. Use au one Market in accordance with the Terms of Service. Download procedures and fee-based applications payment methods may differ depending on the au one Market distributor. Some applications may not function without a microSD memory card.
- Some applications may prevent your phone from entering sleep mode, or will run in the background severely wasting the battery.
- If you believe an application is causing a problem with your IS06, uninstall the relevant application immediately. However, note that this will not solve all problems in all cases.

# Multimedia Functions

Camera  
Gallery

# Camera



## Before Taking a Photo



Icon	Explanation
	Zoom adjustment (9 levels)
	Brightness adjustment (9 levels)
	Function
	Camera mode setting




Icon	Explanation
	[VIEW] Show Gallery
	Take photo (Shutter)
	[SET]
	Photography mode
	Movie mode (● denotes the current mode)

- Tap the screen to display the icons.

## Taking a Photo

### (Take photo)





- Photos taken using your IS06 will be saved under "Camera" on your microSD memory card automatically.


- ▶  [menu]
- ▶  [Camera]
- ▶  (Take photo)
- ▶




## After Taking a Photo

### When [View after Saving] is ON (Default)











Icon	Explanation
	Zoom (10 levels)
	Show Gallery
	Send (Bluetooth®, E-mail, Gmail, PC-mail, PhotoEditor, Picasa)
	Delete automatically saved photos from the microSD memory card

- The icons will disappear automatically after a few moments. To display the icons again, or to remove the icons when they are displayed, simply tap the screen.
- When you want to take another photo, tap  (Back) to return to Photography mode.

- ▶  [menu]
- ▶  [Camera]
- ▶  (Record movie) ▶

## Before Recording a Movie







Icon	Explanation	Icon	Explanation
	Zoom adjustment (9 levels)		Record movie/stop recording
	Brightness adjustment (9 levels)		[SET]
	Function		Photography mode
	[VIEW] Show Gallery		Movie mode (● denotes the current mode)

- Tap the screen to display the icons.

## Record a Movie

 (Record) ▶  (Stop)





- Movies recorded using your IS06 will be saved under "Camera" on your microSD memory card automatically.
- If you receive a phone call while recording a movie, the screen will change to the incoming call screen after automatically saving your recording. After you finish talking, the screen will return to the Movie Preview screen (the screen visible after saving a recorded movie).


- ▶  [menu]
- ▶  [Camera]
- ▶  (Record movie)
- ▶  (Record)
- ▶  (Stop) ▶

## After Recording a Movie

### When [View after Saving] is ON (Default)



Icon	Explanation
	Show Gallery
	Send (Bluetooth®, E-mail, Gmail, PC-mail, YouTube)
	Delete
	Play

- The icons will disappear automatically after a few moments. To display the icons again, or to remove the icons when they are displayed, simply tap the screen.
- When you want to record another movie, tap  (Back) to return to Movie mode.

# Gallery




## Viewing Photos

### Select a folder ▶ Select a photo

- After selecting the folder, slide  in the upper-right corner of the screen to switch between viewing by sub-folder and viewing all files.

### Slideshow Display

### Select a folder ▶ Select a photo ▶ [Slideshow]

- Photos will be shown one-by-one from the photo you selected.
- If a movie is displayed during the slideshow, tap  to play the movie.

## Viewing Movies

### Select a folder ▶ Select a movie ▶ [Movies]

Icon	Explanation	Icon	Explanation
	Rewind		Fast forward
	Play/stop		Playback time slide bar

- When the movie finishes playing the screen will return to the list of files.



# Useful Functions

**Alarm/Wakeup Call**

**PocketBook**

**SmartNote**

## Alarm/ Wakeup Call










 
- ▶  [menu]
- ▶  [Alarm/  
Wakeup Call] ▶

---

### Setting an Alarm

---

 [Alarm] ▶  [Easy] /  [Timely] /  [Daily] /  [Weekly]  
▶ **Select/enter each item** ▶  (Save) except for [Easy]








 
- You can set up to ten different alarms at once. After you have set one alarm, select  [Alarm] ▶  (Menu) or  (Open) ▶  [Add] to add more alarms. To delete an alarm, select  [Alarm] ▶  (Menu) or  (Open) ▶  [Select all] or add a  (Check) beside each one you want to delete ▶  [Delete].
- The alarm will automatically stop if left ringing for approximately one minute.
- If your ISO6 is turned off at the time set for an alarm, the alarm will not ring.

---

### Setting a Wakeup Call

---

 [Wakeup Call] ▶  [+Add] ▶ **Select/enter each item** ▶  (Save)

- You can set up to ten different wakeup calls at once. After you have set one wakeup call, select  (Menu) or  (Open) ▶  [Add] to add more wakeup calls. To delete a wakeup call, select  (Menu) or  (Open) ▶  [Select all] or add a  (Check) beside each one you want to delete ▶  [Delete].
- The wakeup call will automatically stop if left ringing for approximately one minute. Even if snooze is set, the wakeup call will stop ringing after approximately one minute.



 
## Voice Recorder



- You can record for a maximum of 60 minutes, and save up to 20 separate recordings. (You may not be able to save 20 recordings depending on the amount of free space on your microSD memory card.)
- If you want to stop recording without saving, press (Back).

## Playing Back Your Recordings

### Select a File

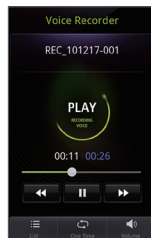

Icon	Explanation
[Volume]	A slider bar for adjusting the volume will appear.
	Pause/Play
	Previous File
	Next File
[List]	Switch to the recordings list screen
[One Time]*	Play the selected file once
[Continuous]*	Play only the selected file on repeat
[Sequential]*	Play the files in order from the selected file

- Items denoted with a \* will appear in order with each tap on the icon.



## Using the Calculator

### Calculating $7 \times 9$

[Calculator] ▶ **7** ▶ **x** ▶ **9** ▶ **=**

Icon	Explanation
(Save)	Name and save the calculation results
Scientific	Switch to Scientific mode

Icon	Explanation
(List)	Display a list of all saved calculation results

## Setting Up the World Clock

[World Clock] ▶ [IntCity] ▶ (Menu) or (Open) ▶ [Add] ▶ Add (Check) beside city ▶ (Save)

Icon	Explanation
[DST]	Set for daylight saving time

Icon	Explanation
[IntCity]	Set for up to six different cities shown in the World Clock

- When you have set six cities to your [IntCity], the [Add] menu will not be shown.  
This icon will appear again if you delete one of the six cities.
- The +/- time represents the time difference with JST (Japan Standard Time).
- Set DST (Daylight Saving Time) for cities that go on daylight saving time.



## Using the Stopwatch

 **[Stopwatch]** ► **Start** ► **Stop**

Icon	Explanation
<b>Restart</b>	Start measurement again from the stopped time

Icon	Explanation
<b>Reset</b>	Clear the stopwatch value and return to the initial screen

# SmartNote













 

## Creating a New Note

If There Are No Previously Saved Notes

Enter note contents ►  (Save)

If There Are Previously Saved Notes

 (New Note) ► Enter note contents ►  (Save)

Icon	Explanation
 (Add Photo)	Paste in a photo from your Gallery or start the Camera to add a new photo
 (Text Input)	Enter characters (font size, color, and position will not change)
 (Pen)	Select a pen  :Pen  :Eraser  :Highlighter
 (Pen Option)	Set the thickness, stroke (except for the Eraser), and color (except for the Eraser) of the selected pen  :Thickness  :Stroke  :Color
 (BackGround Set)	Set the background for your note
 (Clear)	Clear all/Clear drawing



---

## Editing an Existing Note

---

Select a note ▶  (Edit) ▶ Edit contents ▶  (Save)

---

## Deleting a Note

---

 (Menu) or  (Open) ▶  [Select All] or add a  (Check) beside each note to delete ▶  [Delete] ▶ [Yes]

# **In Case of Loss of Your IS06**

Remote Control Lock  
Security Lock Service



# Remote Control Lock



In case of loss of your IS06, you can activate the Remote control lock by calling your IS06 a set number of times from a registered phone number in order to prevent others from using your IS06.

## Activating the Device Administrator

 **[Location & security]** ▶ **[Select device administrators]**  
▶ **[Remote control lock]** ▶ **[Activate]**






- Activate this item to remotely lock your IS06 using either the [Remote control lock] or "Security Lock Service."

## Setting Up the Remote Control Lock

 **[Location & Security]** ▶ **[Remote control lock]** ▶ **Select items**

Remote control lock	Enable/disable Remote control lock (Check this option to set [Valid Caller ID], [Specified period] and [Incoming call count].)
Valid Caller ID	You can register up to three phone numbers.
Specified period	Set the time limit until the number of calls set in the [Incoming call count] should be received. Set from 1 to 10 minutes.
Incoming call count	Set the number of incoming calls until the Remote control lock is activated. Accepts values between 3 and 10.

- If [Remote control lock] is not checked under [Select device administrators] (▶ see above), tapping [Remote control lock] will display the "Activate device administrator?" screen. Tap [Activate] if you want to configure the Remote control lock.

- In case of loss of your IS06, you can configure your IS06 so that the screen will lock and become unusable after receiving a specified number of calls from a registered phone number. We recommend that you set a lock pattern, password, or PIN number beforehand from  [menu] ►  [Settings] ►  [System] ►  [Location & security] ► [Set up screen lock] screen.
- If  [Location & security] ► [Set up screen lock] is set to [None], the PIN “1234” will be used to lock your screen when you use the Remote control lock function.

---

## Activating the Remote Control Lock From a Registered Phone

---





**Call your IS06 from a phone registered in your [Valid Caller ID] list as many times as you set for [Incoming call count] within the [specified period]**

- Be sure not to block your phone number when calling.
- The Remote control lock cannot be activated if your IS06 is turned off, is outside the service area, or if airplane mode is turned on. The Remote control lock may also fail if your IS06 is in an area with poor signal quality.

---

## Unlocking the Remote Control Lock

---

- Unlock the screen lock. If  [menu] ►  [Settings] ►  [System] ►  [Location & security] ► [Set up screen lock] is set to [None], you can enter “1234” and tap [OK] after sliding to unlock in order to unlock the Remote control lock.
- You must also unlock the screen lock from your IS06 when you retrieve it even if you applied the Remote control lock using the Security Lock Service.

## Security Lock Service

### Activating the Remote Control Lock Using the Security Lock Service

- You can activate the Remote control lock on your IS06 even if you did not set up the Remote control lock beforehand by calling the Customer Service Center or by submitting the necessary information from your computer. However, [Remote control lock] under [Select device administrators] (▶P.91) must be activated to use this feature (it is disabled under the factory default settings).
- The Security Lock Service is available free of charge.
- You must submit an application if using the Security Lock Service for the first time. (This can be submitted even after losing your phone.)
- To unlock the Remote control lock, unlock the screen lock of your IS06 when you retrieve it. You cannot unlock the Remote control lock through the Security Lock Service itself.

### Activate the Remote control lock by calling the Customer Service Center

From au cell phones (toll-free): 113 (area code not required)

From any other cell phone or fixed-line phone (toll-free): ☎ 0077-7-111

- Available 24 hours a day.
- Follow the automated voice prompts to complete the process.


### Activate the Remote control lock through au Customer Support (<https://cs.kddi.com/>)

# Appendix/Index

Troubleshooting  
Index

# Troubleshooting

## ▶ **Cannot turn on by pressing (Power)**

- Do you hold down  (Power)? (▶ P.13)
- Is the battery pack charged? (▶ P.10)
- Is the battery pack properly inserted? (▶ P.9)
- Are the contacts on the battery pack dirty?


## ▶ **The power is turned off automatically**

- Has the battery run out? (▶ P.10)

## ▶ **The power is turned off at the startup screen**

- Has the battery run out? (▶ P.10)

## ▶ **Cannot make any phone calls**

- Is your IS06 turned on? (▶ P.13)
- Is the au IC-Card inserted? (▶ P.11)
- Is the phone number you entered correct? (Did you start with the area code first?) (▶ P.34)
- Did you tap  after entering the phone number? (▶ P.34)
- Is your IS06 in airplane mode? (▶ P.14)

## ▶ **Cannot receive any phone calls**

- Do you have sufficient signal strength? (▶ P.5)
- Are you outside the service area? (▶ P.5)
- Is your IS06 turned on? (▶ P.13)
- Is the au IC-Card inserted? (▶ P.11)

- Is your IS06 in airplane mode? (▶ P.14)

## ▶ **(Out of Area) appears**

- Are you outside the service area or in a location with poor signal strength? (▶ P.5)
- Are you covering the built-in antenna with your fingers or hand? (▶ P.7)

## ▶ **Cannot connect to Wi-Fi**

- Is your IS06 receiving a signal from the wireless access point?
- Did you configure your Wi-Fi settings? (▶ P.71)

## ▶ **The LED lamp flashes but I cannot hear any ringtone**

- Is your IS06 in manner mode? (▶ P.14)

## ▶ **Cannot charge the battery pack**

- Is the charger connected properly? (▶ P.10)
- Is the battery pack properly inserted? (▶ P.9)

## ▶ **Cannot perform any key/touch panel operations**

- Is your IS06 turned on? (▶ P.13)
- Did you unlock the screen? (▶ P.20)

## ▶ **“au IC-Card (UIM) error” is displayed**

- Is the au IC-Card inserted? (▶ P.11)
- Is a card different from the au IC-Card used?

▶ **I hear a beeping sound and cannot make any phone calls**

- Are you outside the service area or in a location with poor signal strength? (▶ P.5)
- Either the network is very busy, or the person you are trying to call is already on the phone.

▶ **Cannot hear the other person on the line**

- Is your receiver volume turned all the way down? (▶ P.37)
- Are you covering up the receiver with your ear?  
Place the receiver to your ear.

▶ **The microSD memory card is not recognized**

- Is the microSD memory card inserted properly? (▶ P.12)
- Is the microSD memory card unmounted?

- For more detailed information, see au Customer Support on the au homepage at the following URL.  
**<http://www.kddi.com/customer/service/au/trouble/kosho/index.html>**

# Index

## Number

3D Widget ..... 18

## A

Add Access Point ..... 72

Adding Widgets/  
Icons ..... 28

Airplane mode ..... 14

Alarm/Wakeup Call ..... 84

Android keyboard ..... 21

Android Market ..... 65

au IC-Card ..... 11

au one Market ..... 75

## B

Back key ..... 8

Battery pack  
Charge ..... 10  
Insertion/Removal ..... 9

Battery pack cover ..... 8

Before You Begin ..... 25

Bookmark ..... 74

Browser ..... 73

## C

Calculator ..... 86

Calendar ..... 69

Call Log ..... 35, 37

Camera ..... 78

Camera (lens) ..... 8

Cell phone etiquette ..... ii

Charge ..... 10

C-mail ..... 50

C-mail Receiving Filter  
Settings ..... 56

C-mail Safety Block ..... 55

Contacts ..... 35, 38

## D

Daily Alarm ..... 84

Data Communications ..... 72

Deleting Applications/  
Widgets/Folders ..... 29

Device Administrator ..... 91

Display (touch panel) ..... 8

Drag ..... 16

## E

Earthquake Early  
Warning ..... 52

Easy Alarm ..... 84

Easy Setting ..... 27

E-mail ..... 41

## F

Flick ..... 15

Folder ..... 28, 30

## G

Gallery ..... 82

Gmail ..... 63

Google Account ..... 61

Google Services ..... 61

Google Voice Search ..... 67

## H

Home key ..... 8

Home Preview screen ..... 17

Home Screen ..... 26

## I

Icon list ..... 5

Included items ..... 6

Input mode ..... 23

International Call ..... 34

Internet Connection ..... 71

iWnn IME keyboard ..... 22

## K

Key name ..... 7

## L

Language ..... 13

Latitude ..... 69

LED lamp ..... 8

Light (camera) ..... 8

Long touch ..... 15

## M

Mail Filter ..... 47

Make a Call ..... 34

Manner mode ..... 14

Maps ..... 68

Market ..... 65

Menu key ..... 8

Microphone ..... 8

microSD memory  
card ..... 12

microUSB connection  
jack ..... 8

Moving Applications/  
Widgets/Folders..... 29

## **N**

Navigation ..... 68

News ..... 69

Notification Panel ..... 27

## **P**

Pattern unlock ..... 20

PC-mail..... 57

Pinch out/in ..... 16

Places ..... 69

PocketBook ..... 85

Power key..... 8

Power ON/OFF..... 13

Proximity sensor..... 8

## **Q**

Quick Contact ..... 39

Quick Search ..... 32

## **R**

Receive a Call ..... 36

Receiver ..... 8

Receiver Volume ..... 37

Record ..... 85

Record Movie..... 80

Remote Control Lock ... 91

## **S**

Screen lock ..... 20

Search Box..... 73

Search key ..... 8

Security Lock Service... 93

Shortcut..... 28

Slide ..... 16

Slideshow..... 82

Slide unlock..... 20

SmartNote ..... 88

Standby time ..... 9

Starred mail..... 58

Status Bar..... 27

Stopwatch ..... 87

Strap eyelet..... 8

Switch Windows ..... 74

## **T**

Take Photo..... 78

Talk ..... 68

Talk time ..... 9

Tap ..... 15

Text input method..... 21

Timely Alarm ..... 84

Touch panel  
operation..... 14

Troubleshooting..... 95

## **V**

View Movie ..... 82

View Photo ..... 82

Voice Search ..... 32, 67

Volume key..... 8

## **W**

Wakeup Call ..... 84

Wallpaper ..... 28

Weather Forecast..... 69

Weekly Alarm ..... 84

Widget..... 18

Wi-Fi ..... 71

World Clock..... 86



For inquiries, call: Customer Service Center

For general information and charges (toll free)

From fixed-line phones:



0077-7-111

From au cellphones:



157 area code not required

PRESSING ZERO WILL CONNECT YOU TO AN OPERATOR  
AFTER CALLING 157 ON YOUR au CELLPHONE

For loss, theft or damage and operation information  
(toll free)

From fixed-line phones:



0077-7-113

From au cellphones:



113 area code not required

In case above numbers are not available,



0120-977-033 (except Okinawa)



0120-977-699 (Okinawa)



モバイル・リサイクル・ネットワーク  
8000-0462 (au) 0462-0462 (KDDI)

Cellphone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the  logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

November 2011 Edition

Sales: KDDI CORPORATION・  
OKINAWA CELLULAR TELEPHONE COMPANY  
Manufactured by: Pantech Co., Ltd.